


## Measuring Plans – User Guide Adobe V.9 and above And Rotating Plans

### Measuring and Scaling from Electronic Plans using Adobe V.9 and above

1. a) If opening a plan in Acrobat Reader 9, select the measuring tool.

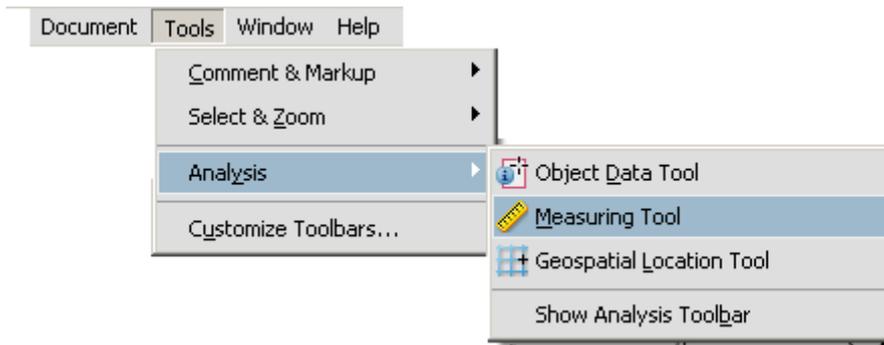


In Adobe Reader Select '**Tools**' from the menu bar, then 'Analysis' and then 'Measuring Tool'

- b) Opening a plan in the Council's Online Planning Register. When the plan is displayed, select the measuring tool.




Right click on the Adobe tool bar to bring up menu

and then select 'More Tools.'

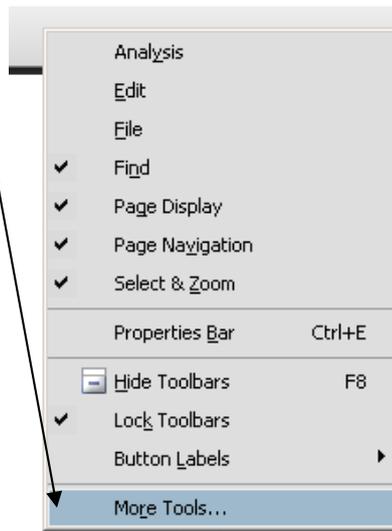

From the 'More Tools' menu select 'Measuring Tool'

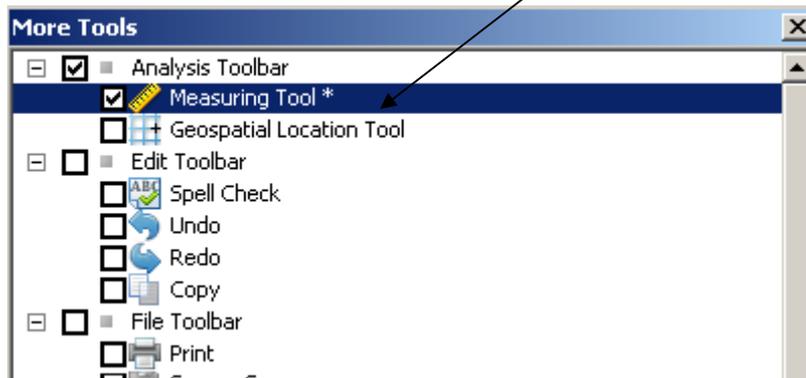


## **Opening the Measuring Tool**

This will add a ruler/scale to the toolbar. Clicking on this will bring up the measuring toolbar




Click on the 'Measuring Tool' and the 'Snap Types' and 'Measurement Types' will appear

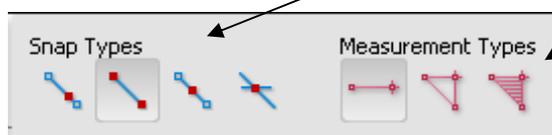

## Changing the Scale Ratio

Right click on the drawing to bring up the menu

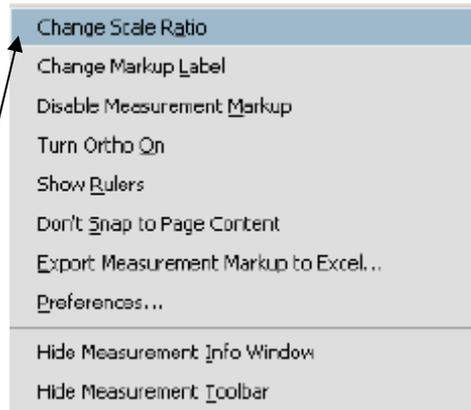

Select 'Change Scale Ratio' which brings up the scale ratio settings



## Setting the Scale


The most commonly used scales on the plans are as follows:

1:20	Set the scale to 5cm = 1m
1:50	Set the scale to 1cm = 0.5m
1:100	Set the scale to 1cm = 1m
1:200	Set the scale to 1cm = 2m
1:500	Set the scale to 1cm = 5m
1:1000	Set the scale to 1cm = 10m
1:1250	Set the scale to 1cm = 12.5m
1:2500	Set the scale to 1cm = 25m


### The Snap Types are as follows

	<b>Snap To Paths</b>
	<b>Snap To Endpoints.</b> This snaps the measurement to the start and end points of a line
	<b>Snap To Midpoints</b>
	<b>Snap To Intersections</b>

**The Measurement Types are as follows**

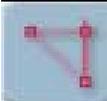	<p><b>Distance Measuring Tool.</b> This is the one for measuring the length of walls and heights of buildings. Click the first point, move the pointer to the second point and then click again. Measurements appear in the 'tool dialog' box.</p>
	<p><b>Perimeter Measuring Tool.</b> This is for measuring the distance around a building. Click each point you want to measure. Then, double-click the last point, or hold the pointer over the last point and click.</p>
	<p><b>Area Measuring Tool.</b> This is for measuring the area of a building. Click each point you want to measure. After you have click at least two points, click the first point to complete the area measurement</p>

When the above ratios are used, measuring your selected line or area and the distance/area will be displayed in metres in the Distance Tool dialog box.

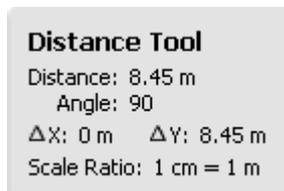


All plans should have the scale clearly marked on them

## Helpful hints for Measuring Distance


Having set the correct scale as above:-

Right Click in the middle of the drawing and click on **'Turn Ortho On'** in the box that appear

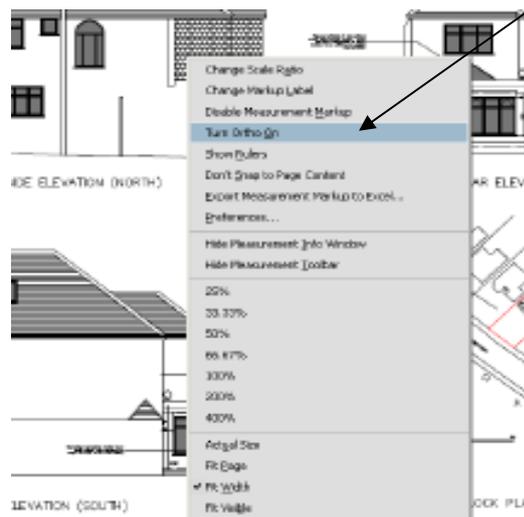


Click on the beginning of the area to be measured and drag the red line to the end of the area to be measured - click


Right click and click on **'Complete Measurement'** at the top of the box that appears

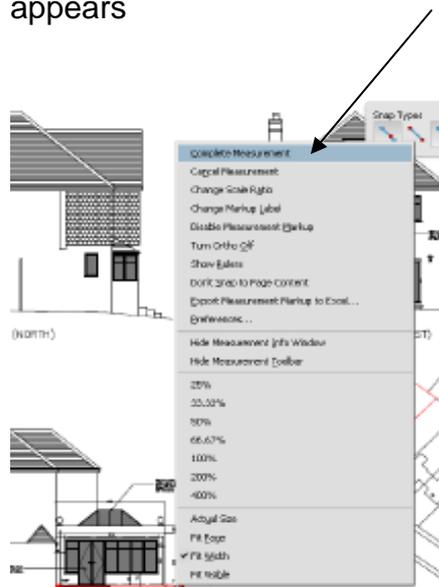

The measurement will appear next to the measured line

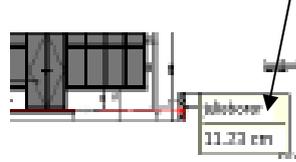


Right click and click on 'Turn Ortho Off'

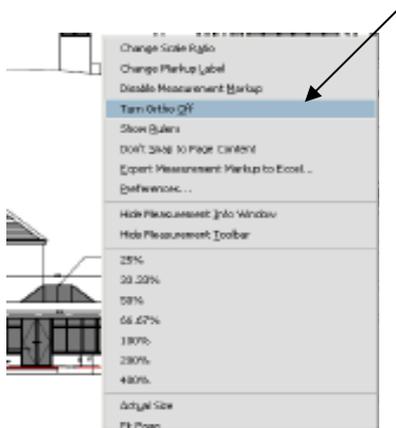


## To Clear the Document of Measurements

Click on Green icon at the top of the screen to refresh the page

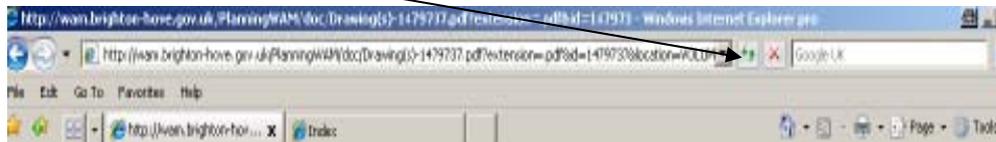

## Rotating Plans

Open the plan and **RIGHT** click in the middle of the document

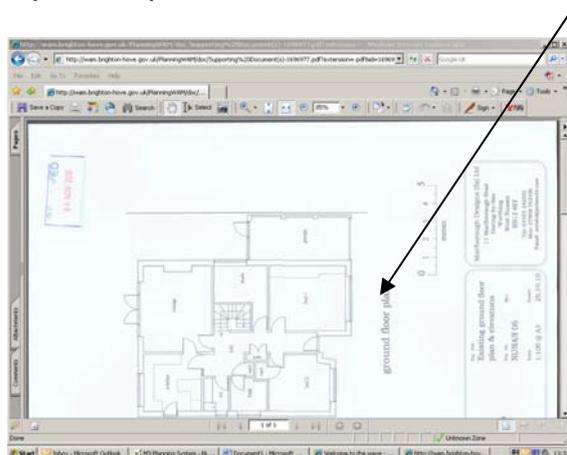

A box will appear and click on '**Rotate Clockwise**' until document can be viewed correctly